

CANALI DMX

4 CANALI

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 CANALI

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 015 016 - 255
6	STROBE No Function Strobe slow to fast	000 - 010 011 - 255

10 CANALI

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No Function Strobe slow to fast	000 - 010 011 - 255
7	COLOR MACROS No Function R 100%, G 0~100%, B 0% R 100%~0%, G 100%, B 0% R 0%, G 100%, B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100% W100%	000 - 010 011 - 030 031 - 050 051 - 070 071 - 090 091 - 110 111 - 130 131 - 150 151 - 170 171 - 200
	Color1	201 - 205
	Color2	206 - 210
	Color3	211 - 215
	Color4	216 - 220
	Color5	221 - 225
	Color6	226 - 230
	Color7	231 - 235
	Color8	236 - 240
	Color9	241 - 245
	Color10	246 - 250
	Color11	251 - 255

LUMIPIX 15IP

MODE 10 Ch	FUNCTION	DMX Value
8	AUTO PROGRAM	
	No Function	000 - 010
	Auto program 1	011 - 027
	Auto program 2	028 - 044
	Auto program 3	045 - 061
	Auto program 4	062 - 078
	Auto program 5	079 - 095
	Auto program 6	096 - 112
	Auto program 7	113 - 129
	Auto program 8	130 - 146
	Auto program 9	147 - 163
	Auto program 10	164 - 180
	Auto program 11	181 - 197
	Auto program 12	198 - 214
Auto program 13	215 - 231	
Auto program 14	232 - 255	
9	AUTO SPEED	
	0~100%	000 - 255
10	DIMMER SPEED MODE	
	Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
Dimmer speed mode3 (slow speed)	204 - 255	

60 CANALI

MODE 60 Ch	FUNCTION	DMX Value
1	RED 1	
	0~100%	000 - 255
2	GREEN 1	
	0~100%	000 - 255
3	BLUE 1	
	0~100%	000 - 255
4	WHITE 1	
	0~100%	000 - 255
	
57	RED 15	
	0~100%	000 - 255
58	GREEN 15	
	0~100%	000 - 255
59	BLUE 15	
	0~100%	000 - 255
60	WHITE 15	
	0~100%	000 - 255

LUMIPIX 15IP

65 CANALI

MODE	FUNCTION	DMX Value
65 Ch		
1	RED 1 0~100%	000 - 255
2	GREEN 1 0~100%	000 - 255
3	BLUE 1 0~100%	000 - 255
4	WHITE 1 0~100%	000 - 255
	
57	RED 15 0~100%	000 - 255
58	GREEN 15 0~100%	000 - 255
59	BLUE 15 0~100%	000 - 255
60	WHITE 15 0~100%	000 - 255
61	AUTO PROGRAM No Function	000 - 010
	Auto program 1	011 - 027
	Auto program 2	028 - 044
	Auto program 3	045 - 061
	Auto program 4	062 - 078
	Auto program 5	079 - 095
	Auto program 6	096 - 112
	Auto program 7	113 - 129
	Auto program 8	130 - 146
	Auto program 9	147 - 163
	Auto program 10	164 - 180
	Auto program 11	181 - 197
	Auto program 12	198 - 214
	Auto program 13	215 - 231
	Auto program 14	232 - 255
62	AUTO SPEED Speed slow to fast	000 - 255
63	DIMMER 0~100%	000 - 255

65 CANALI

MODE	FUNCTION	DMX Value
65 Ch		
64	STROBE No Function	000 - 010
	Strobe slow to fast	011 - 255
65	DIMMER SPEED MODE Preset dimmer speed from display menu	000 - 051
	Dimmer speed mode off	052 - 101
	Dimmer speed mode1 (fast speed)	102 - 152
	Dimmer speed mode2 (middle speed)	153 - 203
	Dimmer speed mode3 (slow speed)	204 - 255